

# Bhive How to Setup the Bhive Camera

The Bhive platform revolutionizes how we work remotely. It creates an environment where you can easily connect and interact with your coworkers visually. Below are the steps that will help you assemble the Bhive camera – it's the introduction to discovering the power of connecting to your hive.

## What's inside the box

- A Bhive camera
- B Camera tripod



## 1 Connect the tripod to the Bhive camera

**What you'll need:** Bhive camera and camera tripod

The Bhive camera is designed to display a profile view of you – just like you would have in an office environment. It can be placed on the right or left side of the computer monitor. Your home office layout will help you determine which side you would like the camera to face.

The top of the tripod has a screw that will fit into the Bhive camera. Simply screw the tripod into the Bhive camera.



## 2

## Plug the Bhive camera USB into the laptop


**What you'll need:** assembled Bhive camera & laptop

Attached to the tripod there will be a USB. Connect the USB to the laptop and you'll be ready to log into LaunchPad. When the camera is on, you'll see a blue light turn on above the camera lens.




### Buzzworthy Note:

The IT Department has enabled the ports on the computer to allow the Bhive USB.

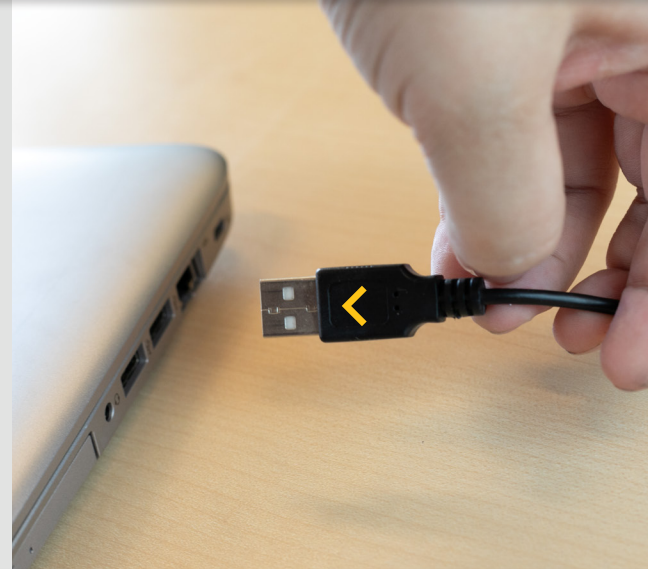

Now that you have successfully setup the Bhive camera, you are ready for Bhive training. During Bhive training, we will review best practices for connecting with your team.

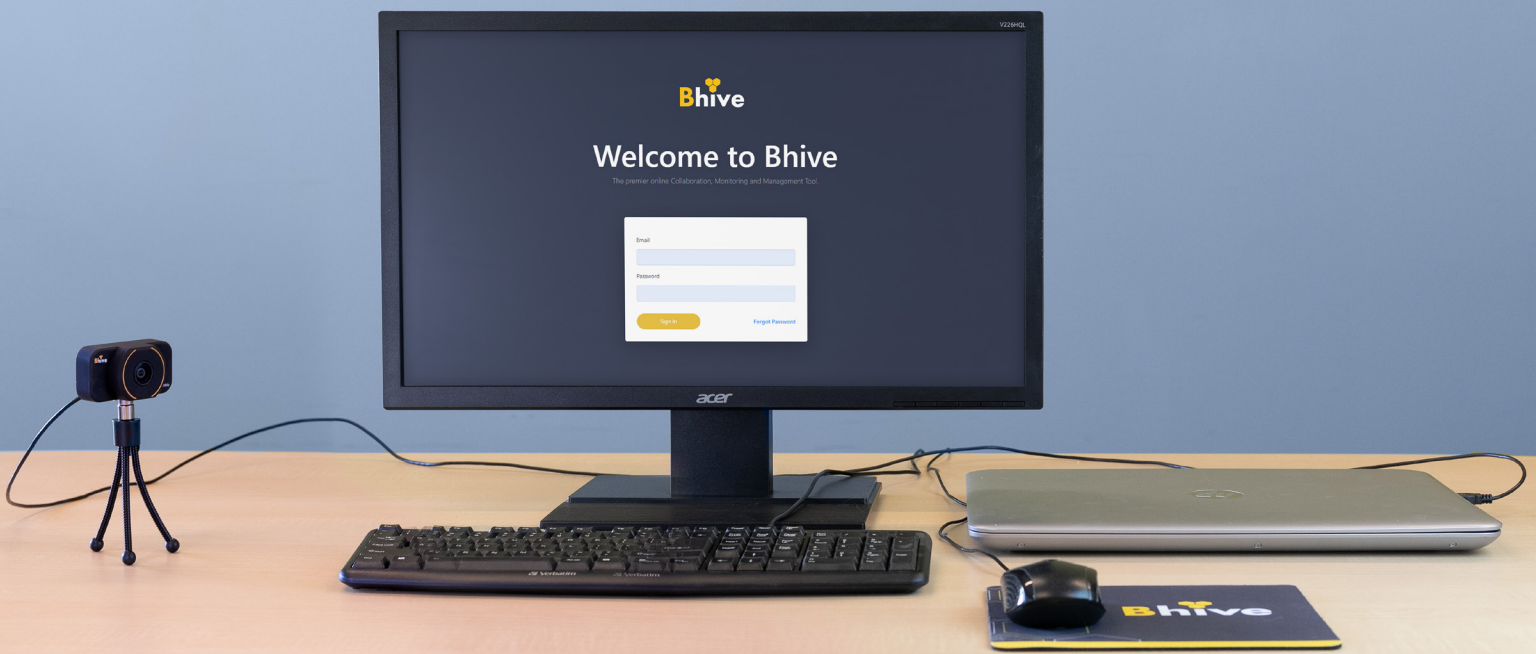

If you have any **questions**, please contact our support team.



support@inbhive.com



844.600.5663